


# Assembly Instruction Sheet #S-1086 P50-O For Style 1086P50-O

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
 Light Source: (1) 120V LED 74W DIMMABLE E (4000K)  
 Estimated Assembly Time: 10-20 minutes  
 Precautions: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

## Package Contents

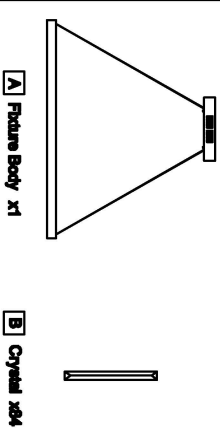


## Hardware Contents

 
PART	DESCRIPTION	QUANTITY
AA	Mounting Balls	2pcs
BB	Washer nut	2pcs
CC	Outlet Box Screw	2pcs
DD	Mounting Screw	2pcs
EE	Crocker	1pcs



**STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crocker.**  
 A. Line up a set of holes on the Crocker (EE) and Holes on the ceiling canopy, Thread Mounting Screws (DD) into the holes on the Crocker (EE), Pass Lock Washers and Thread Hex Nuts onto the Mounting Screws (DD).  
 Hand tighten until snug.

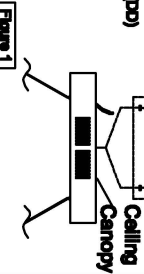

**STEP 2 - Attach Crocker to Outlet Box.**  
 A. Pass the supply wires through the Crocker (EE). Attach the Crocker (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

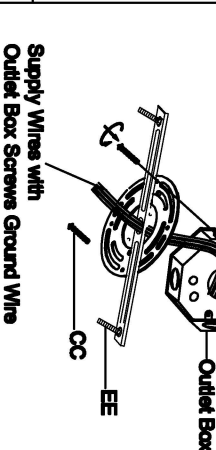

Supply Wires with Outlet Box Screws Ground Wire

Figure 2

**STEP 3 - Fit Ceiling Canopy to Mounting Assembly**  
 A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crocker (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Mounting Ball (AA) and ceiling canopy and proceed to Step 4.

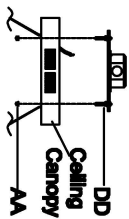


Figure 3

**STEP 4 - Wire Connections**  
 A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

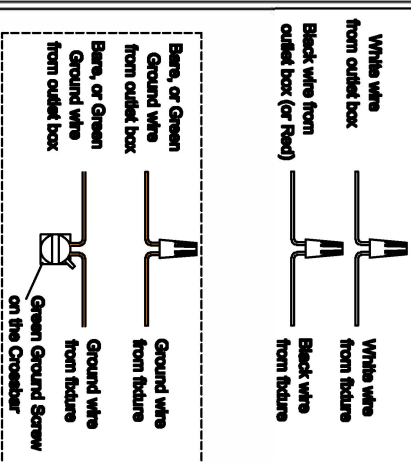


Figure 4

**STEP 5 - Install Ceiling Canopy to Ceiling**  
 A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Mounting Balls (AA) and hand tighten until snug.

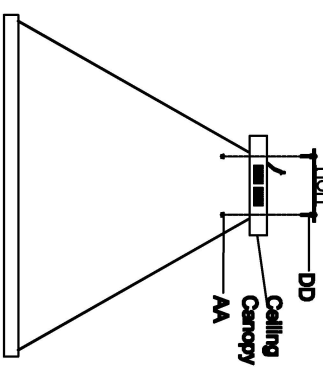


Figure 5

**STEP 6 - Install Crystal**  
 A. Put the Crystal (B) on the Fixture Body set.

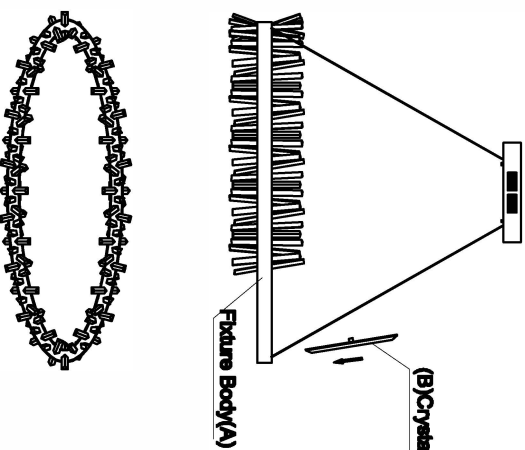


Figure 6

