Assembly Instruction Sheet #IS-1100P24-10 For Style 1100P24-10

Tools Required: Flathand accountiver, Philips accountiver, plans, who callers, who athypers, electrical tops, safely glamm.
Light Source: (10): E12 Condelabre Base Buibs: 60W Maximum (Not Include).


Propusation: Identity and inspect all parts before beginning installation. Check package contact list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not eliampt to assumble, install, or operate the titure. Contact customer service for replacement parts.

▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed <u>electrician</u> if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

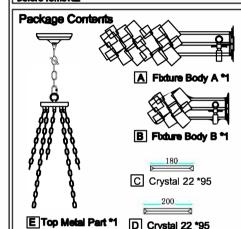


Hardware Contents

PART	Canopy Lock Ring Wire nut Canopy Chain Loop Crossher Outlet Box Screw			QUANTITY
AA				1pcs 3pcs 1pcs 1pcs
BB				
CC				
DD				
EE				2pcs
AA	BB	CC	DD	EE
	Λ			•


STEP 1 -Assemble the Chain

- A. Open the lock to connect with the loop on the Fixture Body (Please note that lock the small chain with the Fixture Body (B) and lock the bigger chain with the Fixture Body (A)
- B. Make the Electricity upward then thread the Electricity Wire through the Loop .
- C.Please when you connect the wire , you should connect positive pole with positive pole and negative pole with negative pole.

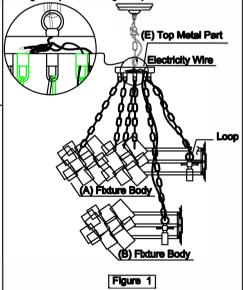

STEP 2- Install the Cunopy Chain Loop and Nipple

- A. Thread the ripple into the crossing and extruding above the crossiner. Thread the lock wanter and the hex nut onto top and of the ripple. Do not therite at this morrest.
- B. Attach the organization the outlet box and secure with outlet box screws that brainded). Hend tighten until snup.
- c. Thread the canopy chain loop onto the and of the ripple and hand tighten until smap. Place the calling canopy over the campy chain loop equint the calling to determine the carrier position of the ripple. Thread the carriery lock ring onto the carriery chain loop. Adjust the ripple to allow the calling canopy to rest equint the ceiling when held in place by the carriery lock ring.
- D. Remove the campy look ring from the campy chain loop and remove the calling campy. Unsurew outliet box ecouse to remove the crossbar assembli Tight the hour nut above the combine. And then released the crossbar essembly to the outliet box.



STEP 3 - install the Fixture Chain and Celling Canopy

- A. Adjust the thates chain to your dealed length by removing this if remaind.


 B. Pull the supply wises through the thates chain allowating links. After the wites are through the fidure chain, pull the supply wites and the ground wite through the currous look that and the calling company. In order.
- through the carropy look ring and the calling carropy in order.

 C. Allach one and of the fidure chain to the ficture loop with one guide. Bink.

 Lift the fidure and I foliare what up and allach the other end of the fidure chain onto the carropy o hain I cop with enather quick this.

 The fidure will now hance safely.
- The fidure will now hang easily.

 D. Feed the supply whee and ground whe through the canopy chain loop and nipple into the outlet box. Cut the wires leaving approximately 5" of whe easily noting them the cutlet box.
- E. Go to Step 4 for whe connections and follow the directions. Return to Step F
 in this step when complete with Step 4.
- F. Raise the calling campy and campy lock ring up the thisme chain and over the campy chain loop. Tighten the campy lock ring onto the campy chain loop until tight.

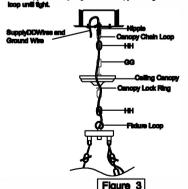


STEP 4 - Wire Connections

A. <u>Use standard wire connectors</u> (not included) to make all wire connections. Twist connectors until wires are fightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

White wire from outlet box

Black wire from outlet box (or Red)

White wire from fluture

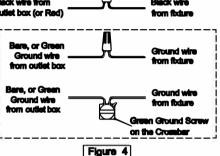

STEP 5 - Install crysta and Bulbs.

A. Install bulbs onto sockets and push snug into place.

B. Please put the capstal to the Fixture Body (A).

