

# Assembly Instruction Sheet #S-1212P28 For Style 1212P28

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (11) SUGGESTED LED G9 BULBS MAX. 6W (Not Include).  
**Individual Assembly Time:** 16-30 minutes.  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

**Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

- A** Fixture Body x1
- B** Middle Rod
- C** Glass shade x9
- D** Metal shade x3
- E** Glass shade x1
- B1** 4"x2pcs
- B2** 6"x1pcs
- B3** 12"x6pcs

**Hardware Contents**

PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	4pcs
BB	Mounting Screws	2pcs
CC	Outlet Box Cover	1pc
DD	Mounting Bracket	1pc
EE	Mounting Screws	2pcs
FF	Lock Washer	1pc
GG	Decorative Cap	1pc


**STEP 1 – Install Rods to Fixture Body**  
 A. Thread the power cord to the Middle Rods, fix the Middle Rods with the Fixture Body then the same to connect the other pieces of Rods, finally fix the Canopy with the Rods.




**STEP 2 – Attach Mounting bracket to Outlet Box**  
 A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with the Green Ground Screws (CC). Tighten until snug.




**STEP 3 – Fit Ceiling Canopy to Mounting bracket Assembly**  
 A. Fit the Ceiling Canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The Ceiling Canopy should be snug against the ceiling and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Ceiling Canopy is secure, remove the Decorative Caps (AA) and Ceiling Canopy and proceed to Step 4.

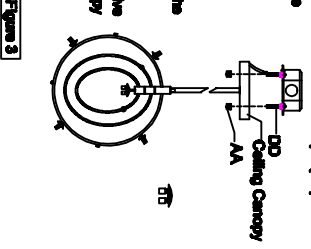

**STEP 4 – Wire Connections**  
 A. Use standard wire connections to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

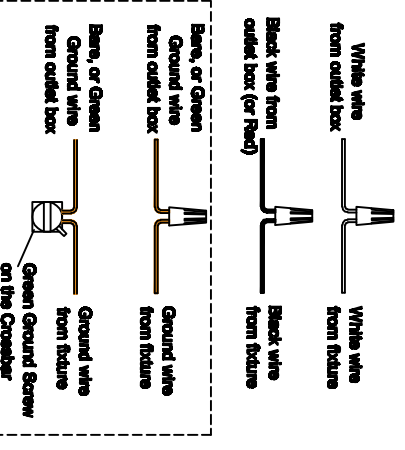

**STEP 5 – Install Ceiling Canopy to Ceiling**  
 A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy of the Fixture Body (A) over the outlet box. Align the holes in the Ceiling Canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.

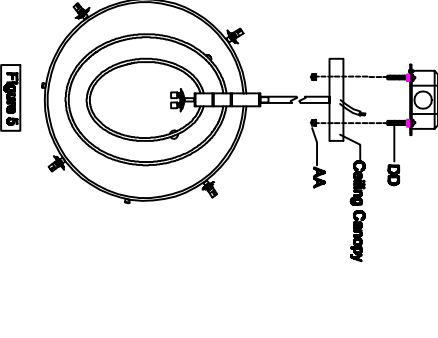

**STEP 6 – Install bulb and Glass Shade Metal shade.**  
 A. Insert bulb (Not Include) into sockets and screw snug into place.  
 B. Pushes put the Glass Shade Metal shade to the Fixture's Body (A).

