

Assembly Instruction Sheet #IS-5523P38C For Style 5523P38C

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (9) G9 G9V Maximum/Not Include.
Estimated Assembly Time: 10-20 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

- 28mmx11PCS 14mmx8PCS 25mmx11PCS 36mmx11PCS
- 1 Crystal x42
- 1 Fixture Body x1
- 1 Middle Rod
- B1 4 7/8pcs
- B2 6 7/8pcs
- B3 12 1/4pcs
- 1 Ceiling Canopy x1
- 2 Crystal x38
- 14mmx2PCS
- 25mmx11PCS
- 36mmx11PCS
- 3 Crystal x30

STEP 1 - Release Mounting bracket from Ceiling Canopy.

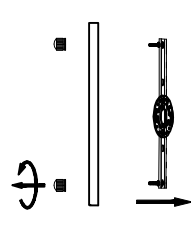


Figure 1

STEP 2 - Install Middle Rod / Ceiling Canopy to Fixture Body.

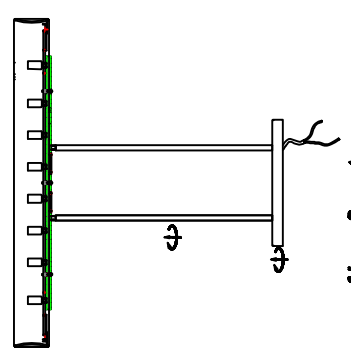


Figure 2

Hardware Contents		
PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Outlet Box Screw	2pcs
BB		
CC		

STEP 3 - Attach Mounting bracket to Outlet Box
 A. Pass the supply wires through the Mounting bracket (EE) Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground (EE) with Outlet Box Screws (CC). Tighten until snug.

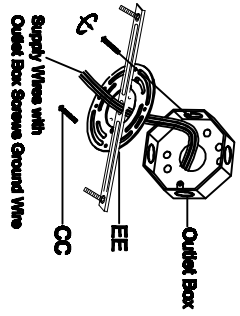


Figure 3

STEP 4 - Wire Connections
 A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

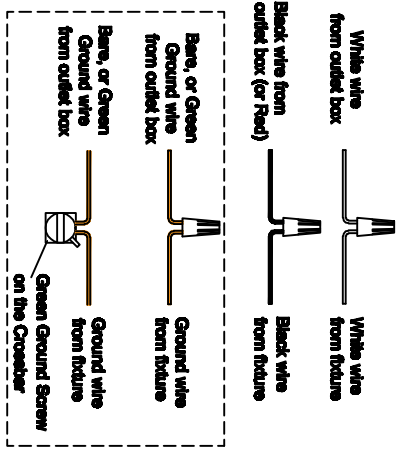


Figure 4

STEP 5 - Install Ceiling Canopy to Ceiling





Figure 5

STEP 6 - Install Crystal and Bulbs.




Figure 6