












# Assembly Instruction Sheet #S-8003C3 0C For Style 8003C30C

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (1) E12 Candelabra Base Bulb 60W Medium/Full Incandescent.  
**Electrical Assembly Time:** 10-20 minutes.  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install or operate the fixture. Contact customer service for replacement parts.

**Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.  
 These instructions are provided for your safety. It is very important you read them completely before installing the fixture.  
 We strongly recommend that a licensed, professional electrician perform the installation.  
 Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

-  **A** Fixture Body x1
-  **B** Bobbecha x1
-  **C** Connecting tube x3
-  **D** Middle rod x1
-  **E** Metal Ring x1
-  **1** Hardware
-  **1** Crystal x130
-  **2** Crystal x282
-  **3** Crystal x289
-  **4** Adapters
-  **4** Crystal x1

**Hardware Contents**

| PART | DESCRIPTION      | QUANTITY |
|------|------------------|----------|
| BB   | Wire nut         | 2pcs     |
| CC   | Outlet Box Screw | 2pcs     |

### STEP 1 - Release Mounting bracket from Ceiling Canopy.

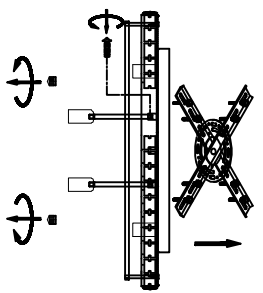


Figure 1

### STEP 2 - Install Ring to Fixture Body.

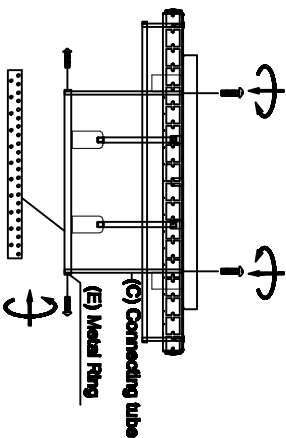


Figure 2

**STEP 3 - Attach Mounting bracket to Outlet Box.**  
 Appear the supply wires through the Mounting bracket (EE) with the head of the Green Ground Screw leading you. Secure it with Outlet Box Screws (not included). Tighten until snug.

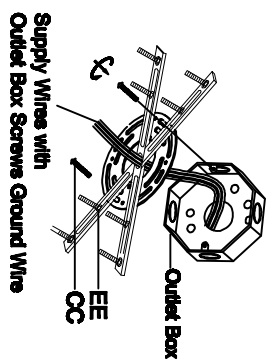


Figure 3

**STEP 4 - Wire Connections**  
 A. Use standard wire connections to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully snuff all the connected wires into the Outlet Box.

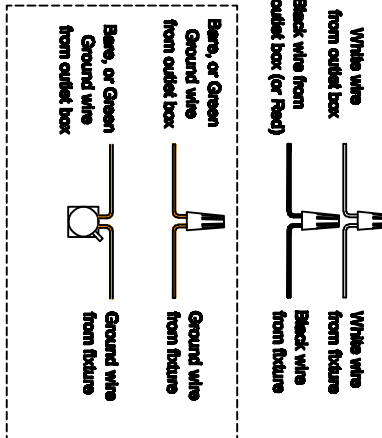


Figure 4

### STEP 5 - Install Ceiling Canopy to Ceiling

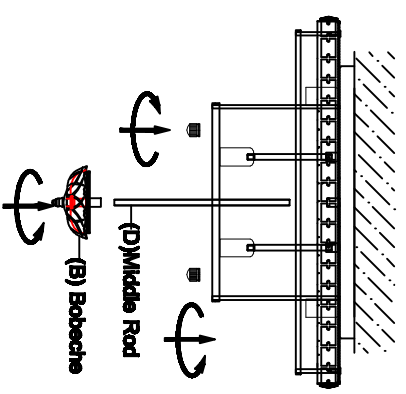


Figure 5

### STEP 6 - Install Crystal and Bulbs.

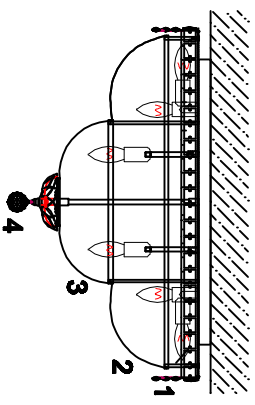


Figure 6