


Assembly Instruction Sheet #IS-9612P11 For Style 9612P11

Total Requirements: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (1) E26 Bulb 60W Maximum(Volt Included).
Estimated Assembly Time: 15-30 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check packages contain list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulb. Hold wire bulbs are given sufficient time to cool before removal.

Package Contents

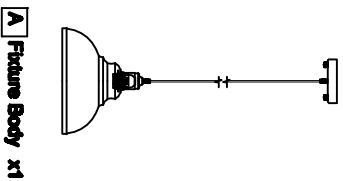


Hardware Contents


PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Outlet Box Screw	2pcs



STEP 1- Release Mounting bracket from Ceiling Canopy.

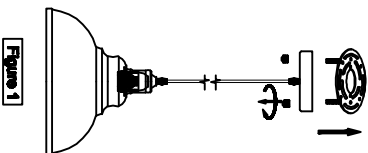


STEP 2 - Attach Mounting bracket to Outlet Box

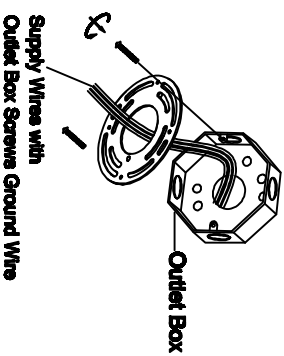


STEP 3 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connection until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet box.

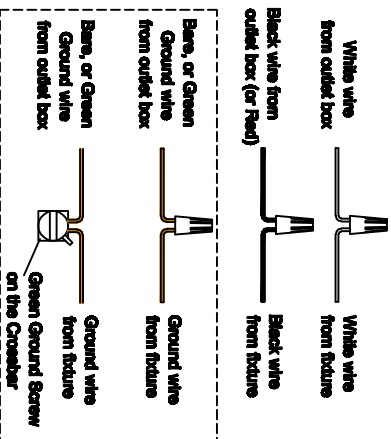

STEP 4 - Install Ceiling Canopy to Ceiling

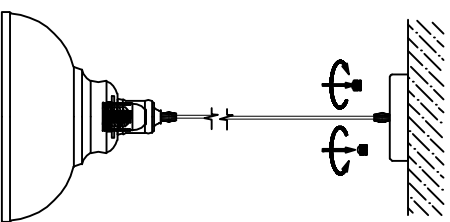

STEP 5 - Install Bulbs.

