

Assembly Instruction Sheet #S-9631P10 For Style 9631P10


Total Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) E26 Bulb 60W Maximum(Not Included)
Estimated Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check packages contain list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Hold one bulb one given sufficient time to cool before removal.


Package Contents

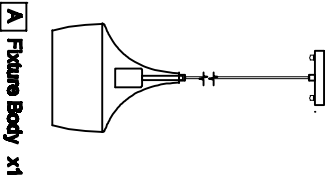


Hardware Contents	
PART	DESCRIPTION QUANTITY
B9	Electrical Nuts 2pcs
CC	Outlet Box Screw 2pcs



STEP 1- Release Crossbar from Ceiling Canopy.




STEP 2 - Attach Mounting Bracket to Outlet Box

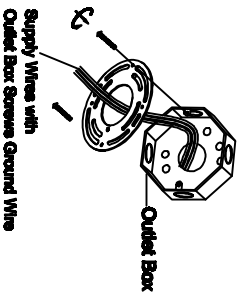


STEP 3 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connection until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

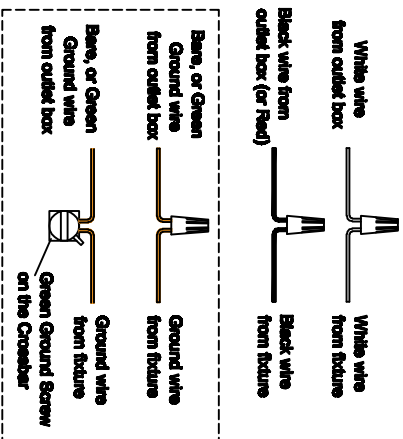

STEP 5 - Install Bulbs.

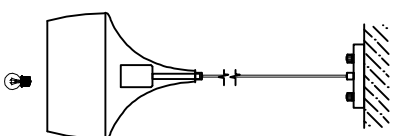

STEP 4 - Install Ceiling Canopy to Ceiling

