For Style 9913P19 Assembly Instruction Sheet #IS-9913P19


Tools Required: Flathead screwdriver, Phillips screwdriver, pilers, wire cutters, wire strippers, electrical taps, safety glasse Light Source: (3) Candelabra Base Bulbs 60W Maximum (Not Include).
Estimated Assembly Time: 20-30 minutes
Preparation: Identify and import all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture Contact customer service for replacement parts.

doubt Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in

These instructions are provided for your safety. It is very important you read them completely

We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to fore installing the fixture.

Package Contents cool before removal. STEP 1 - Install the Canopy Chain Loop and Nipple

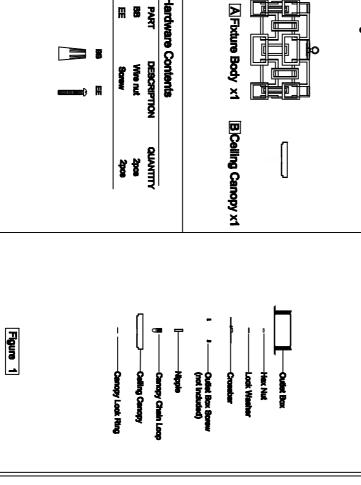

Black wire from outlet box (or Red)

Black wire from fixture

from fixture

White wire

Bers, or Green Ground wire from outlet box

Green Ground Screv on the Crossber

from fixture

Ground wire

Bare, or Green Ground wire from outlet box

Ground wire from foture

White wire from outlet bax

PART

田 3

